



RS232/RS485 Control Codes

Settings:

Baudrate 2400
Data Bit 8
Parity N
Stop Bit 1

Codes

Function	Address	ID	Command	Verification
up	1C	01	AA	address ^ ID ^ command
down	1C	01	5A	address ^ ID ^ command
left	1C	01	BA	address ^ ID ^ command
right	1C	01	5B	address ^ ID ^ command
tilt down	1C	01	CA	address ^ ID ^ command
tilt up	1C	01	5C	address ^ ID ^ command
on	1C	01	DA	address ^ ID ^ command
off	1C	01	5D	address ^ ID ^ command
learning code	1C	01	EA	address ^ ID ^ command
delete code	1C	01	5E	address ^ ID ^ command